


ChargeMaster Plus – Output Setup

By default, the ChargeMaster Plus charges a single battery connected to output 1. You can select any other configuration, either via the local user interface or using MasterAdjust.

Local setup

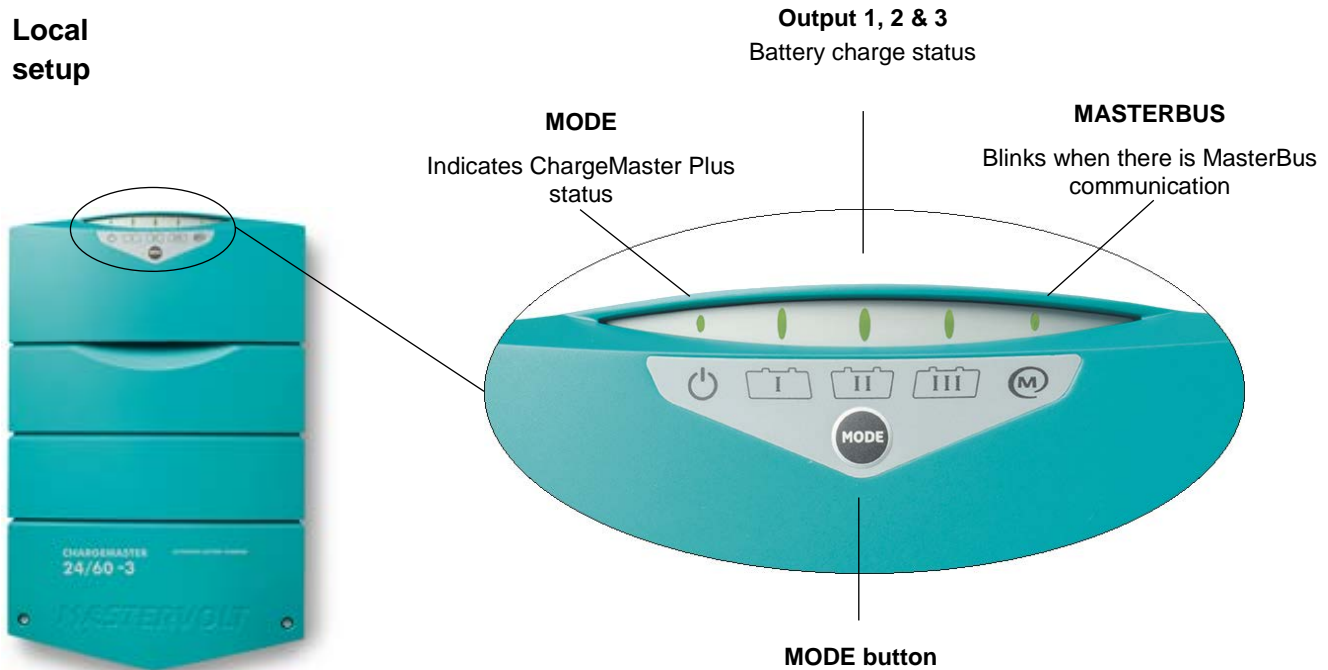

Press and hold the MODE button for 3 seconds to switch the charger on or stand-by

1. Disconnect output 1, 2 and 3.
2. Before connecting AC, press and hold the MODE button.
3. While keeping the MODE button pressed, connect AC.
4. MODE will blink green and output 1 will light up.
5. Press the MODE button shortly until the used outputs are selected.
6. When the used outputs are selected, disconnect AC and wait for the charger to shut down.
7. Connect AC, the output configuration is now stored.
8. Connect output 1, 2 and 3.

MasterBus setup

1. Connect a displaying device as described in the manual.
2. Navigate to the Configuration tab of MasterAdjust.
3. Select the outputs of the ChargeMaster Plus that are being used.

Output 1
<input checked="" type="checkbox"/> In use
Name Output 1
Shunt device Select
Output 2
<input type="checkbox"/> In use
Name Output 2
Smart terminal
<input type="checkbox"/> In use
Name Output 3