


*TO ENSURE PROPER OPERATION, IT IS ESSENTIAL TO POSITION THE MIXED OUTLET WATER SENSOR DOWNSTREAM OF ALL UNITS. THIS SENSOR IS EXCLUSIVELY REQUIRED FOR STAGE 1 AND IS ONLY NECESSARY WHEN UTILIZING CWMC.

*THE RETURN WATER SENSOR MUST STAY IN THERMAL CONTACT WITH THE CIRCULATING WATER THAT ACCURATELY REPRESENTS THE WATER RETURNING TO EACH STAGE.

TO CWMC
IF USED

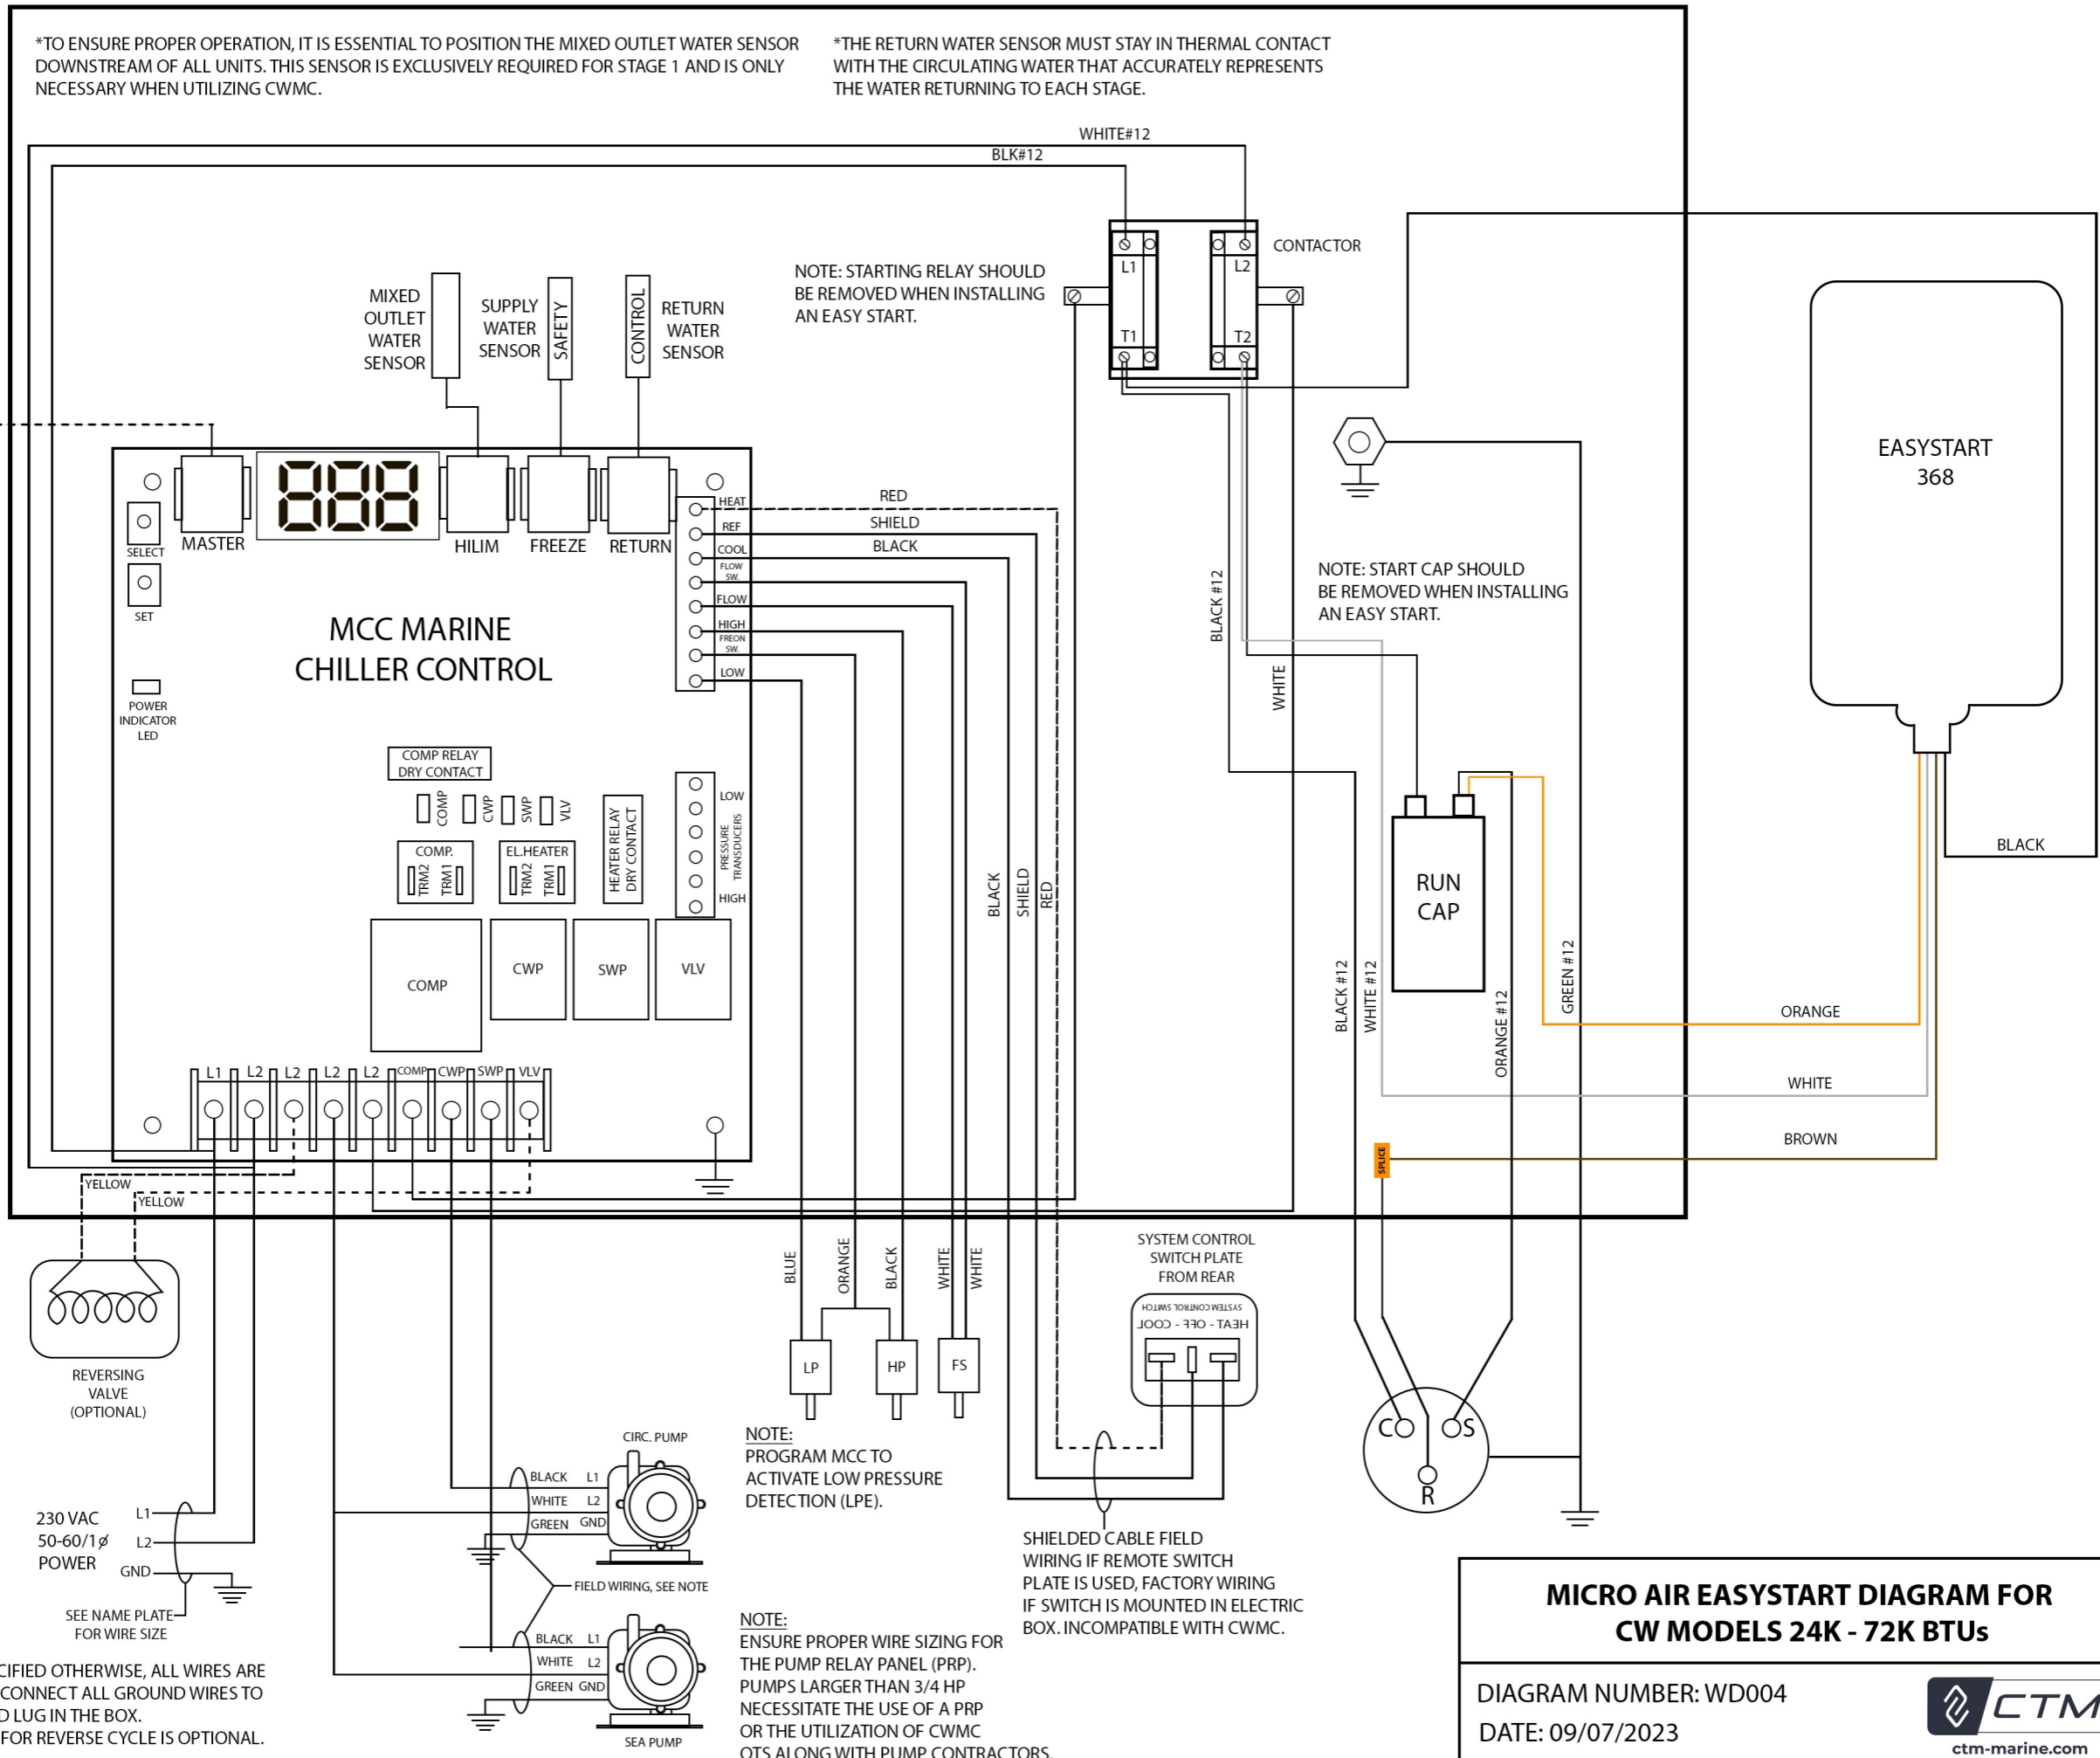

NOTE:
UNLESS SPECIFIED OTHERWISE, ALL WIRES ARE #18 GAUGE. CONNECT ALL GROUND WIRES TO THE GROUND LUG IN THE BOX. THE WIRING FOR REVERSE CYCLE IS OPTIONAL.

**MICRO AIR EASYSTART DIAGRAM FOR
CW MODELS 24K - 72K BTUs**

DIAGRAM NUMBER: WD004

DATE: 09/07/2023

