

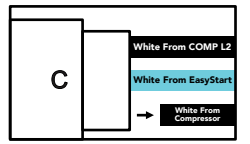


STEP 1: Disconnect WHITE wire*

*Make sure you are disconnecting the white wire on the run capacitor coming from the unit's compressor.

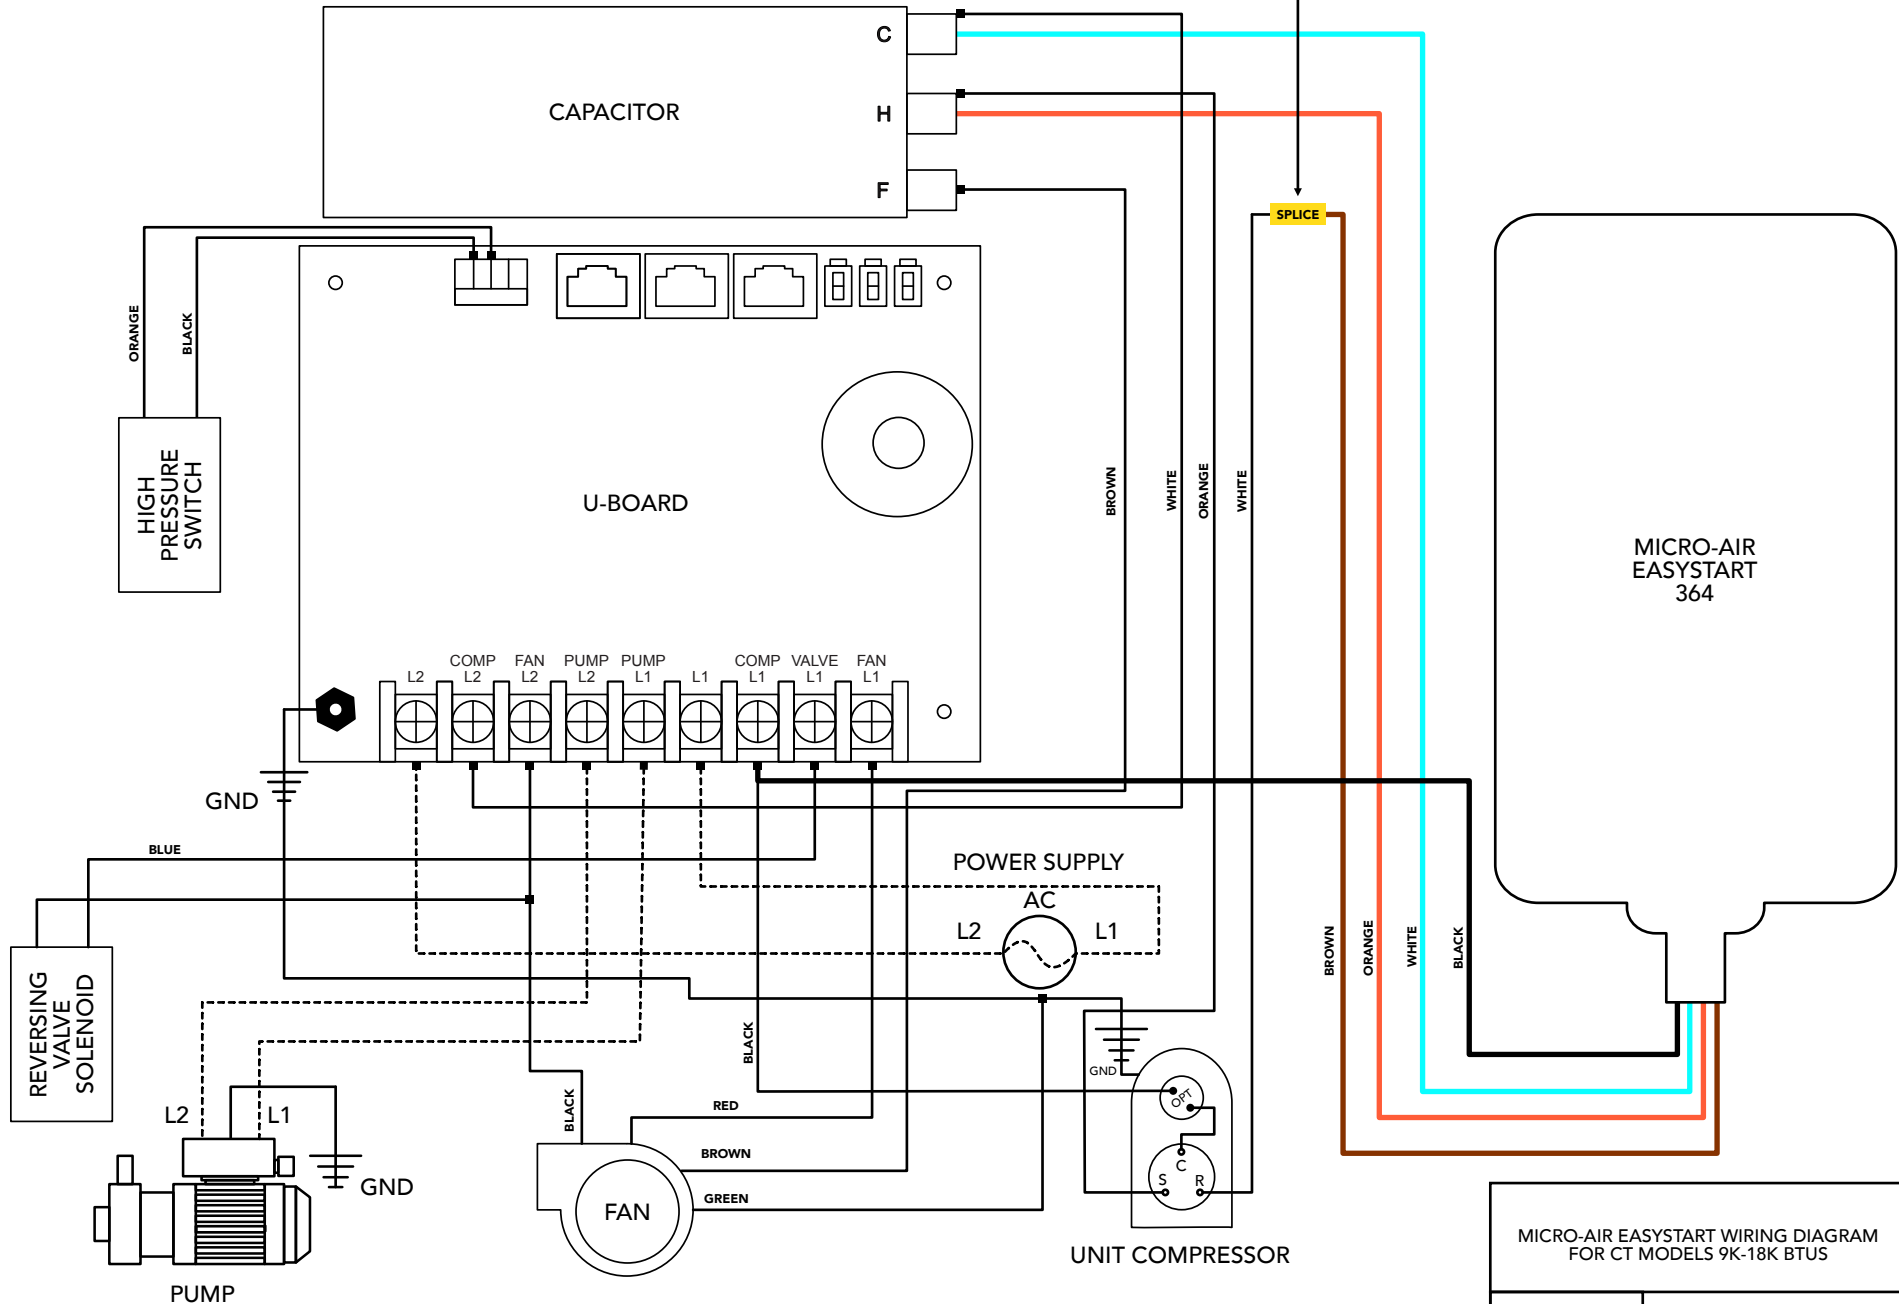

STEP 2: Connect WHITE wire from the compressor to BROWN wire from EasyStart.

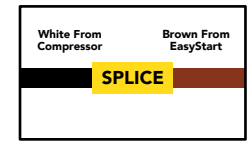

MICRO-AIR EASYSTART WIRING DIAGRAM FOR CT MODELS 9K-18K BTUS

